

TABLE OF CONTENTS

Precautions.....	00-i	Body and Accessories.....	9-i
Precautions	00-1	Precautions	9-1
General Information.....	0-i	Wiring Systems	9A-1
General Information	0A-1	Lighting Systems	9B-1
Maintenance and Lubrication	0B-1	Combination Meter / Fuel Meter / Horn.....	9C-1
Service Data.....	0C-1	Exterior Parts	9D-1
Engine	1-i	Body Structure	9E-1
Precautions	1-1		
Engine General Information and Diagnosis	1A-1		
Emission Control Devices	1B-1		
Engine Electrical Devices.....	1C-1		
Engine Mechanical.....	1D-1		
Engine Lubrication System	1E-1		
Engine Cooling System.....	1F-1		
Fuel System	1G-1		
Ignition System.....	1H-1		
Starting System.....	1I-1		
Charging System.....	1J-1		
Exhaust System	1K-1		
Suspension.....	2-i		
Precautions	2-1		
Suspension General Diagnosis.....	2A-1		
Front Suspension	2B-1		
Rear Suspension.....	2C-1		
Wheels and Tires	2D-1		
Driveline / Axle	3-i		
Precautions	3-1		
Drive Chain / Drive Train / Drive Shaft.....	3A-1		
Differential.....	3B-1		
Transfer	3C-1		
Propeller Shafts.....	3D-1		
Brake	4-i		
Precautions	4-1		
Brake Control System and Diagnosis	4A-1		
Front Brakes.....	4B-1		
Rear Brakes	4C-1		
Parking Brake.....	4D-1		
Transmission / Transaxle	5-i		
Precautions	5-1		
Automatic Transmission.....	5A-1		
Steering	6-i		
Precautions	6-1		
Steering General Diagnosis	6A-1		
Steering / Handlebar	6B-1		