

9. Slide rear bevel gear (reverse) and thrust washer off propeller shaft. Figure 14.

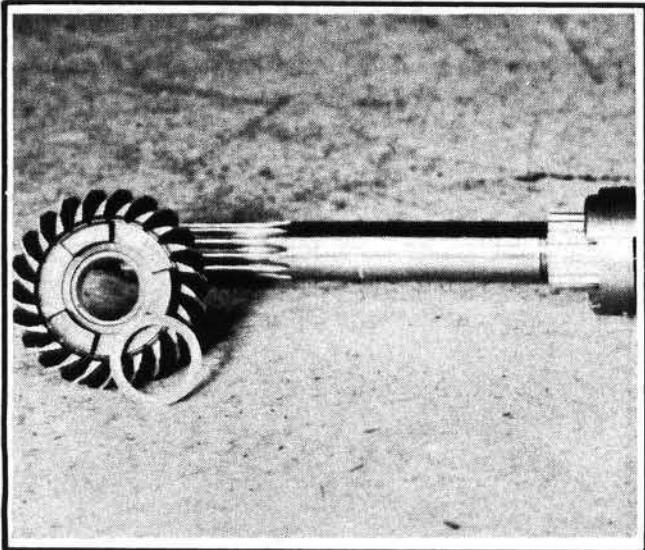


Figure 14.

10. Remove bevel pinion (drive gear). Figure 15.

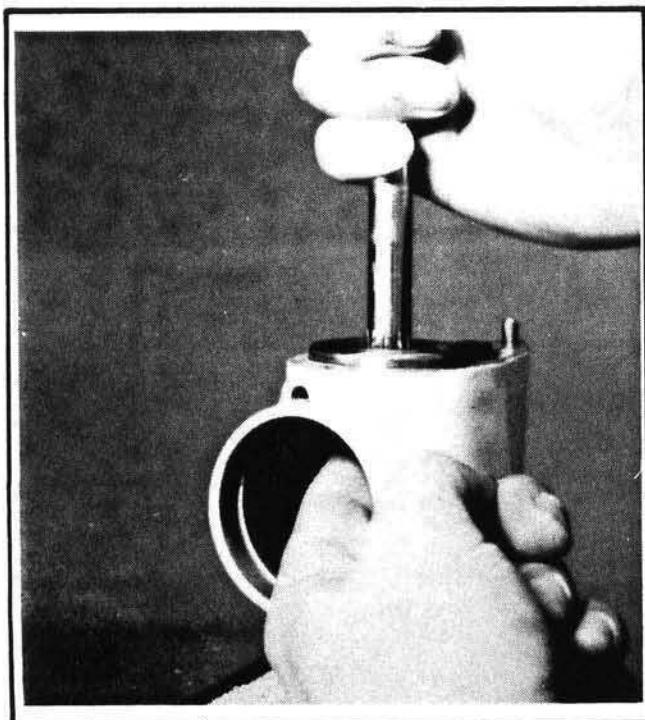


Figure 15.

11. Remove shift cam detent spring. Figure 16.

12. Slide cam out of slot in lower gear housing. Figure 16.

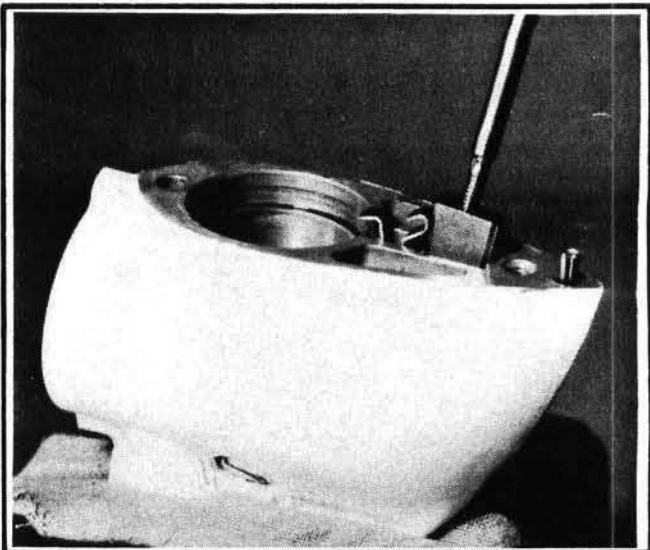


Figure 16.

13. Slide front bevel gear (forward gear) out of bore in lower gear housing. Figure 17.

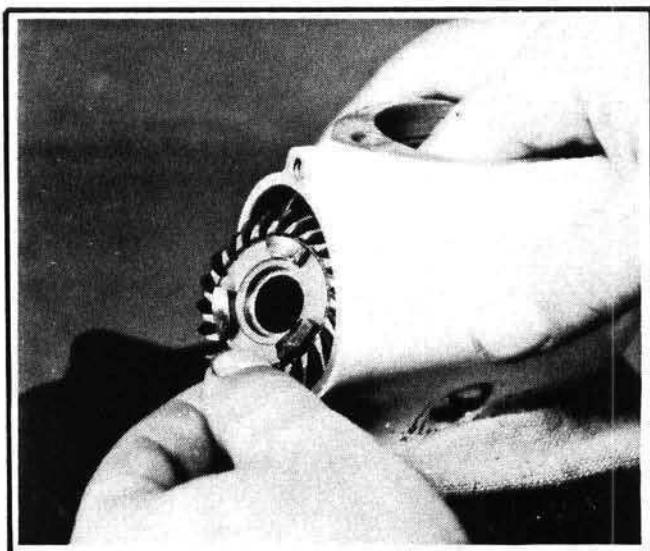


Figure 17.