

TABLE OF CONTENTS

Click on the blue text to go.

Note: To navigate through this manual, use the PAGE UP/PAGE DOWN buttons on the keyboard, click on the Table of Contents bookmarks on the left side of the screen, or click the blue text below. To return to this page, click the Manual Table of Contents button at the bottom of each page.

General Information	2	Electrical System	104
General Specifications	2	Battery	104
Torque Specifications	2	Testing Electrical Components	105
Torque Conversions (ft-lb/N-m)	3	Switches	105
Break-In Procedure	3	Accessory Receptacle/Connector	105
Fuel - Oil - Lubricant	4	Brakelight Switch (Auxiliary)	105
Genuine Parts	5	Brakelight Switch (Handlebar Control)	106
Preparation For Storage	5	Cooling Fan Switch	106
Preparation After Storage	5	Engine Coolant Temperature (ECT) Switch	106
Periodic Maintenance/Tune-Up	6	Thermistor	107
Periodic Maintenance Chart	6	Glow Plug Controller/Relay	107
Lubrication Points	7	Fan Motor	108
Air Filter	7	Fuse Block/Power Distribution Module	108
Valve Clearance	8	Electronic Speedometer Speed Sensor	109
Muffler/Spark Arrester	8	Ignition Switch	110
Adjusting Throttle Cable	8	Handlebar Control Switches	110
Engine RPM (Idle)	9	Drive Select Switch	111
Engine Oil - Filter	9	Front Drive/Differential Lock Actuator	111
Transmission Lubricant	10	Starter/Starter Solenoid	112
Front Differential/Rear Drive Lubricant	10	Starter Relay	113
Tires	11	Alternator/Regulator	113
Driveshaft/Coupling	11	Headlights	114
Nuts/Cap Screws/Screws/Bolts	11	Taillight - Brakelight	115
Injector Timing	11	Fuel Solenoid	115
Lights	11	Troubleshooting	116
Shift Lever	13	Drive System	117
Frame/Welds/Racks	13	Front Drive Actuator	117
Hydraulic Brake Systems	13	Front Differential	118
Burnishing Brake Pads	15	Drive Axles	131
Coolant	15	Rear Gear Case	134
Checking/Replacing V-Belt	16	Hub	135
Fuel Filter	17	Hydraulic Brake Caliper	136
Engine/Transmission	19	Troubleshooting Drive System	140
Specifications	19	Troubleshooting Brake System	140
Removing Engine/Transmission	20	Suspension	141
Top-Side Components	24	Shock Absorbers	141
Left-Side Components	53	Front A-Arms	142
Right-Side Components	60	Rear A-Arms	144
Center Components	75	Wheels and Tires	146
Installing Engine/transmission	89	Troubleshooting	147
Troubleshooting	95	Steering Frame	148
Fuel/Lubrication/Cooling	98	Steering Post/Tie Rods	148
Diesel Fuel Injection System	98	Handlebar Grip	150
Lift Pump	98	Steering Knuckles	150
Unit Injectors	99	Measuring/Adjusting Toe-In	152
Injector Timing	99	Front Rack	154
Fuel Filter	99	Front Bumper Assembly	154
Fuel Solenoid Assembly	99	Front Body Panel/Side Panels	154
Fuel Tank	100	Footrests	157
Fuel/Vent Hoses	101	Belly Panel	157
Oil Filter/Oil Pump	101	Exhaust System	158
Testing Oil Pump Pressure	101	Rear Body Panel/Rack	158
Liquid Cooling System	101	Adjusting Headlight	159
Radiator	102	Taillight Assembly	159
Hoses/Thermostat	103	Seat	159
Fan	103	Troubleshooting	160
Water Pump	103	Controls/Indicators	161
Troubleshooting	103	Hand Brake Lever/Master Cylinder Assembly	161
		Throttle Control	162
		Shift Lever	163
		Speedometer/Tachometer/LCD	163

ARCTIC CAT
SHARE OUR PASSION