



Contents

Recommended Tools	2
Preparing to Work Inside Your Computer	2
Before Working Inside Your Computer	2
Screw Identification	3
Disconnecting Interface Connectors	5
Removing a Cable from a ZIF Interface Connector	5
Replacing a Cable into a ZIF Interface Connector	5
Field-Replaceable Parts and Assemblies	6
Removing and Replacing Field-Replaceable Parts and Assemblies	10
Hard-Disk Drive Assembly	11
Removing the Hard-Disk Drive Assembly	11
Replacing the Hard-Disk Drive Assembly	11
Modular Bay Devices (Diskette Drive, CD-ROM Drive, DVD-ROM Drive, CD-RW Drive, SuperDisk LS-120 Drive, Battery, or Travel Module)	12
Memory Module Cover	12
Removing the Memory Module Cover	12
Memory Modules	13
Removing the Memory Modules	13
Replacing the Memory Modules	13
Keyboard Assembly	14
Removing the Keyboard Assembly	14
Replacing the Keyboard Assembly	16
Microprocessor Module	18
Removing the Microprocessor Module	18
Replacing the Microprocessor Module	19
Display Assembly	20
Removing the Display Assembly	20
14.1-Inch Display Assembly Bezel and LCD Panel	21
Removing the 14.1-Inch Display Assembly Bezel	21
Removing the 14.1-Inch LCD Panel	22
Removing the 14.1-Inch LCD Flex Cable	22
Replacing the 14.1-Inch LCD Flex Cable	23
Replacing the 14.1-Inch LCD Panel	24