HOW TO USE THIS MANUAL

MANUAL FORMAT

All of the procedures in this manual are organized in a sequential, step-by-step format. The information has been compiled to provide the mechanic with an easy to read, handy reference that contains comprehensive explanations of all disassembly, repair, assembly, and inspection operations.

In this revised format, the condition of a faulty component will precede an arrow symbol and the course of action required will follow the symbol, e.g.,

Bearings

Pitting/Damage → Replace.

To assist you in finding your way about this manual, the Section Title and Major Heading is given at the head of every page.

An Index to contents is provided on the first page of each Section.

THE ILLUSTRATIONS

Some illustrations in this manual may differ from the model you have. This is because a procedure described may relate to several models, though only one may be illustrated. (The name of model described will be mentioned in the description).

REFERENCES

These have been kept to a minimum; however, when you are referred to another section of the manual, you are told the page number to go to.

WARNINGS, CAUTIONS AND NOTES

Attention is drawn to the various Warnings, Cautions and Notes which distinguish important information in this manual in the following ways.

ၽ

The Safety Alert Symbol means ATTENTION! BECOME ALERT! YOUR	SAFETY IS INVOLVED
▲ WARNING	
Failure to follow WARNING instructions <u>could result in severe injury or</u> operator, a bystander, or a person inspecting or repairing the jet boat.	r death to the machine
CAUTION	
A CAUTION indicates special precautions that must be taken to avoid da	mage to the jet boat.
NOTE:	
A NOTE provides key information to make procedures easier or clearer.	
IMPORTANT:	
This part has been subjected to change of specification during production.	